


Waste Basket Installation Guide

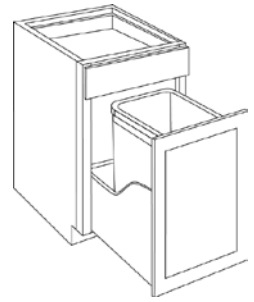


1 Install glides into the cabinet box.



(A) Install back bracket and secure into the back of the cabinet box. The center screw should measure $1\frac{3}{4}$ " from each side wall.


The bottom bracket center screw should measure $1\frac{1}{4}$ " from the bottom of the box

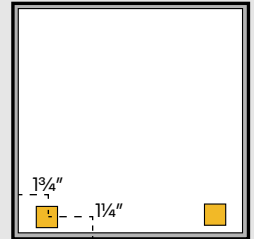

BACK VIEW (Inside)


(B) The center of the bottom glide should measure 1" from the bottom of the frame.

Insert and attach glide to the back bracket and secure to the sides of the cabinet frame with screws.

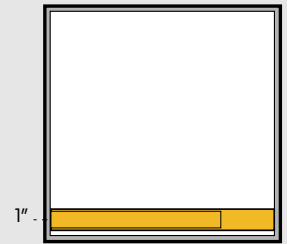

SIDE VIEW (Inside)

2 To attach door to waste basket insert, center the insert to the door width. The insert should start $1\frac{1}{2}$ " from the bottom of the door.

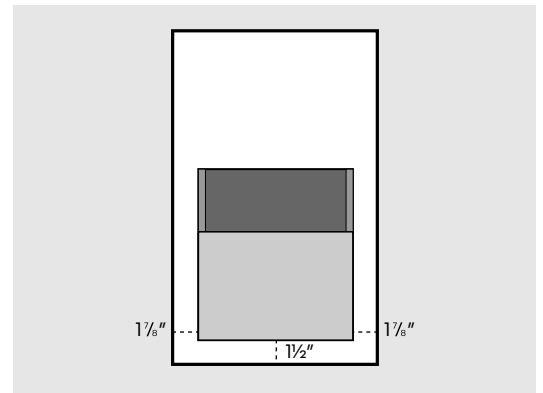

3 Detach inner glides by using the lever on the bracket.



4 Attach inner glides on both sides of the shelves as shown below.



5 Slide inner glides into outer glides and secure the shelves

