


# Pull-out Shelf Installation Guide

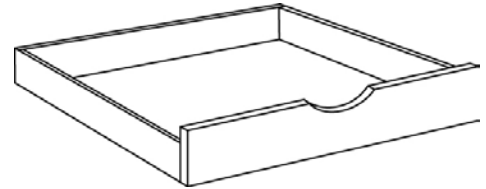


**1 Install** glides into the cabinet box.



**(A)** Install back bracket and secure into the back of the cabinet box. The center screw should measure  $1\frac{3}{4}$ " from each side wall. The bottom bracket center screw should measure  $1\frac{1}{4}$ " from the bottom of the box


For a second POS, the top bracket center screw should measure  $11\frac{1}{4}$ " from the bottom of the box.

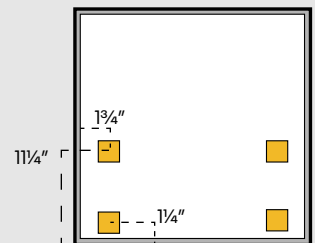

BACK VIEW (Inside)


**(B)** Insert and attach glide to the back bracket and secure to the sides of the cabinet frame with screws.

The center of the top glide should measure 11" from the bottom of the frame. The center of the bottom glide should measure 1" from the bottom of the frame.

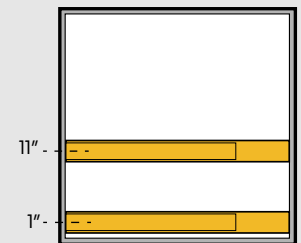

SIDE VIEW (Inside)

**2 Detach** inner glides by using the lever on the bracket.

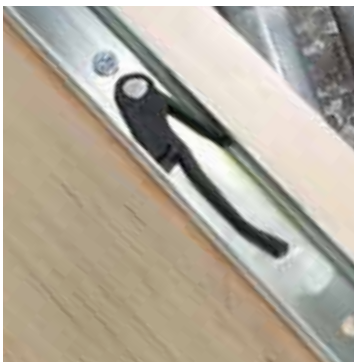

**3 Attach** inner glides on both sides of the POS as shown below.



**4 Slide** inner glides into outer glides and secure the POS.

